

Thank you for purchasing this Autel MaxiCharger AC Wallbox Commercial. Our equipment is manufactured to a high standard and — when used according to these instructions and properly maintained — will provide years of trouble-free performance.



IMPORTANT: Before operating or maintaining this equipment, please read these instructions carefully, paying extra attention to the safety warnings and precautions. Failure to use this product properly may cause damage and/or personal injury and will void the product warranty.


WARNING

- This equipment should only be installed by a licensed electrician in accordance with all local codes and ordinances.
- This equipment must be grounded through a permanent wiring system or an equipment-grounding conductor.
- Do not install or use this equipment near flammable, explosive, harsh, or combustible materials, chemicals or vapors.
- Children should be supervised when around this equipment.
- Do not insert fingers or foreign objects into the electric vehicle connector.
- Do not use the equipment if the flexible power cord or EV cable is frayed, broken or otherwise damaged, or fails to operate.
- Do not use the equipment if the enclosure or the EV connector is frayed, broken or otherwise damaged, or fails to operate.
- Use 90 °C wire copper conductors only.
- Do not operate the equipment outside its operating temperature range of -40 to 131 °F (-40 to 55 °C).
- Incorrect installation and testing of the equipment could potentially damage the vehicle's battery, components, and/or the equipment itself.
- Handle the equipment with care during transportation. Do not subject it to strong force or impact or pull, twist, tangle, drag or step on the equipment, to prevent damage to it or any components.
- Avoid pulling too hard or tangling the cables and do not drag or step on the equipment during installation. Try to avoid any heavy impacts to avoid damage to any of the internal components.

Product Overview

MaxiCharger AC Wallbox Commercial

1. Ambient Light Sensor — detects ambient brightness
2. Display
3. LED Indicators (from left to right)
 - Power LED
 - Internet Connection LED
 - Charging LED
 - Bluetooth Connection LED
4. RFID Reader
5. Holster
6. Connector
7. AC Input Cable
8. EV Charging Cable

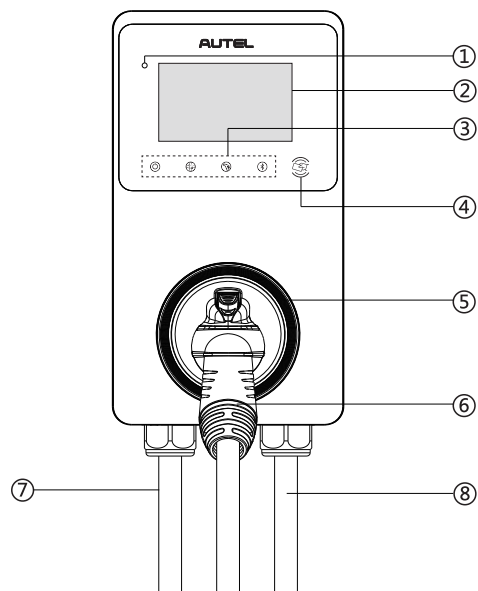




9. Bottom Ethernet Cable Port

10. Mounting Screws

11. Rear AC Inlet Hole

12. Rear Ethernet Cable Port

13. Product Label

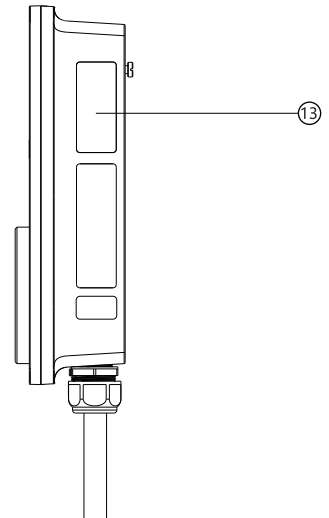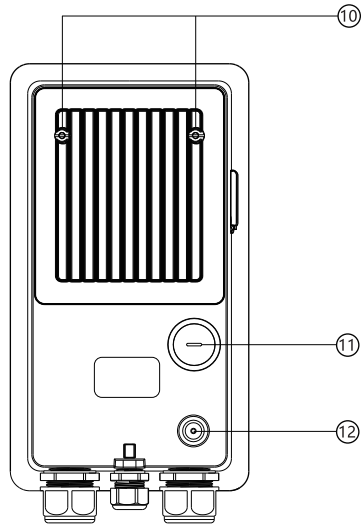
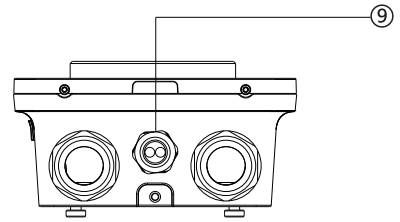


14. SIM Card Socket

15. RJ45 Port

16. RS485 Port — connects the RS485 cables

17. Current Selector — adjusts the current for the charger

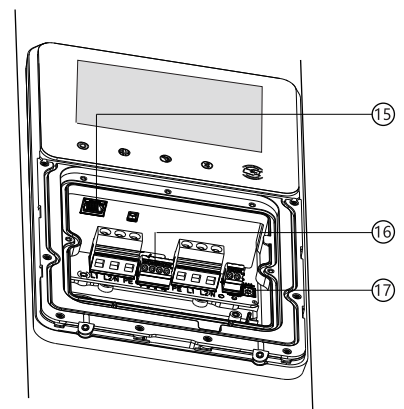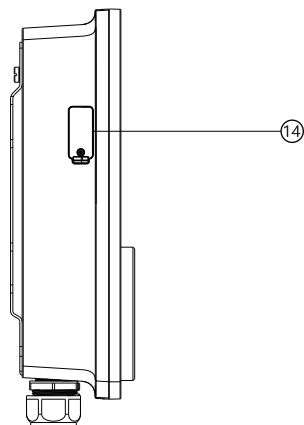

LED Indicators

LED	Description
Power LED	<ul style="list-style-type: none">• Solid Green: The charger is on.• Not Illuminated: The charger is off.• Flashing Yellow: Data transmission has started and/or firmware is upgrading.• Solid Yellow: Firmware upgrade has failed.• Solid Blue: Data transmission has failed; will illuminate green in five seconds.
Internet Connection LED	<ul style="list-style-type: none">• Solid Green: The charger is connected to the Internet.• Not Illuminated: The charger is not connected to Internet.
Charging LED	<ul style="list-style-type: none">• Solid Blue: An EV is connected.• Flashing Blue: A schedule is active.• Flashing Green: An EV is charging.• Solid Green: A charging session has ended.• Not Illuminated: The charger is not connected.• Solid Orange: A recoverable error has occurred.• Solid Red: An irrecoverable error has occurred. (Please contact support.)
Bluetooth Connection LED	<ul style="list-style-type: none">• Flashing Green: The charger is connected to a mobile device via Bluetooth.• Flashing Blue: The charger is connected to the accessory VCI (Vehicle Communication Interface) via Bluetooth. (VCI sold separately.)• Flashing Cyan: The charger is connected to a mobile device and a VCI device simultaneously via Bluetooth. (VCI sold separately.)• Not Illuminated: The charger is not connected via Bluetooth.

Getting Started

Preparing for Installation

Location

- Install your charger on a flat and vertical surface capable of supporting its weight (e.g., a finished wall or pedestal). The maximum weight of a MaxiCharger AC Wallbox Commercial is approximately 14.8 lbs (6.7 kg).
- Install the charger in a location that allows the charging cable to remain within its bending tolerance.
- Position the charger in a location where it is not vulnerable to being damaged.
- Ensure the electrical panel supports a 240 V dedicated circuit with a new, dedicated, and non-GFCI two-pole circuit breaker, in accordance with local codes and ordinances.
- The recommended installation height is between 51 and 67 inches (1300 and 1700 mm).

Installing the Charger

The MaxiCharger AC Wallbox Commercial supports both rear entry and bottom entry wiring. Choose the most appropriate wiring entry for your charger based on the placement of the wiring.


IMPORTANT:



- Switch off all electrical power prior to installation.
- Both the rear entry and bottom entry locations are on the left side of the charger. Ensure that you mount your charger in a location where the power supply wiring can be easily accessed on the left side.
- The rear entry cables should be put through the cable inlet holes prior to mounting the charger to the wall dock.


Placement

1

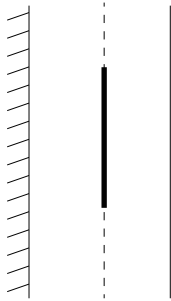


1. Find the wall stud nearest to and on the right side of the power supply wiring using a wall stud finder.
2. Draw a vertical line of approximately 20" (50 cm) in line with the wall stud at the approximate height of your mounting.

2

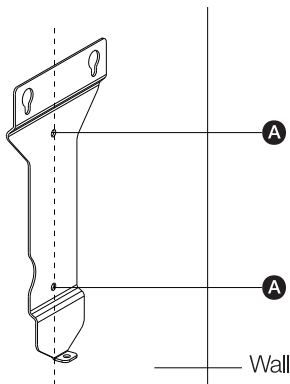


Place the wall dock with the center holes aligned with the vertical line. Mark the two lower mounting holes (A) and remove the wall dock.

Mounting the Wall Dock

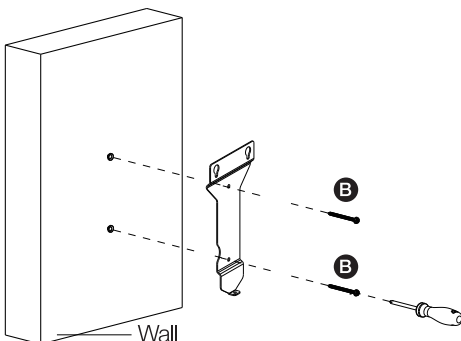

1. Drill two 5/16" holes and insert two 5/16" diameter wall anchors into the lower mounting holes.
2. Attach the wall dock to the mounting location by screwing two M6 x 50 screws (B) into the lower mounting holes. Tighten the screws using the screwdriver type PH2.

Preparing for Installation

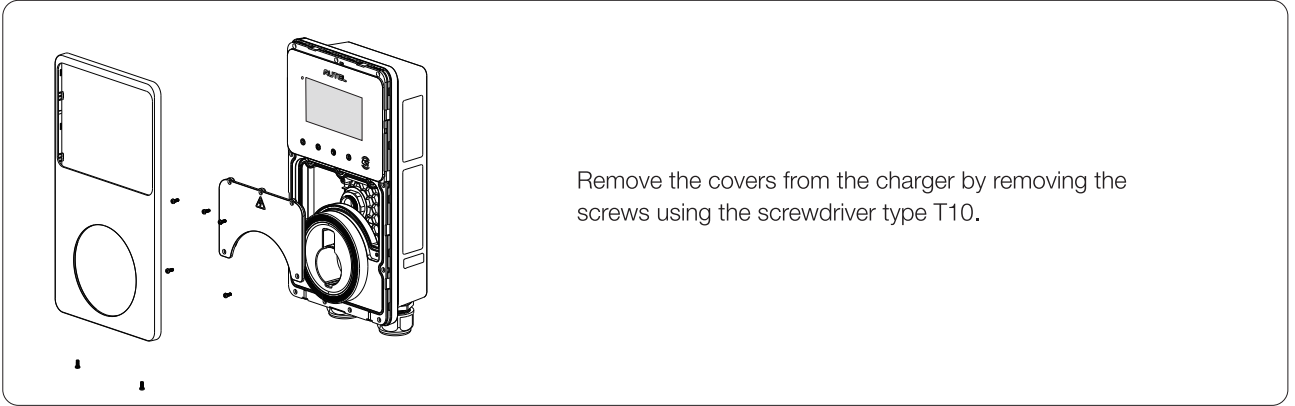

Power Supply Wiring

IMPORTANT:





- Use copper conductors with the maximum wire size of 6 AWG (16 mm²).
- Ensure that the screws for the terminal blocks are properly tightened.
- Ensure that there is no copper wire or debris left inside of the charger before switching on the electrical power to the charger.

1

Rear Entry:


1. Remove the rear entry power conduit plug from the charger and replace it with the 3/4" conduit fitting (C).
2. Insert the AC input cable into the conduit fitting and attach the conduit fitting to the charger.
3. Screw the nut (D) into the conduit fitting.

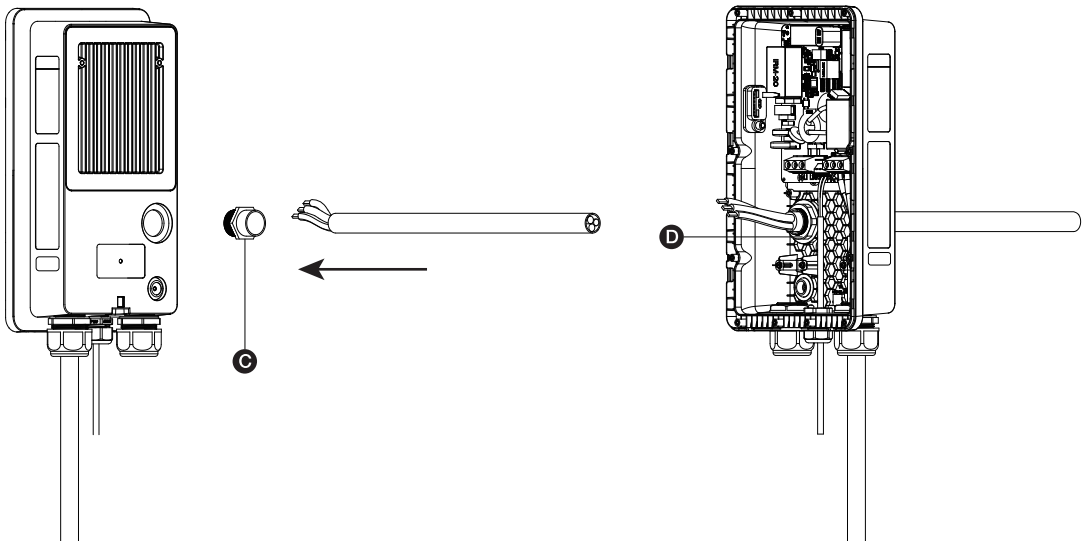

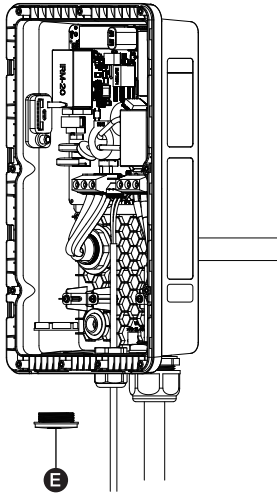

4. Remove the lower-left cable gland and install the bottom entry power conduit plug (E) to the charger.


NOTE: The conduit fitting is not included.

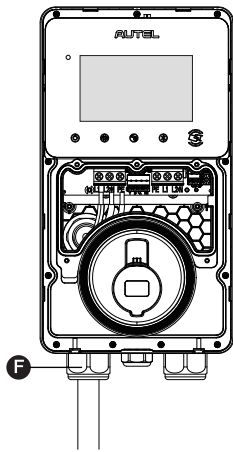

Bottom Entry:

Insert the AC input cable into the inlet hole (F).


2

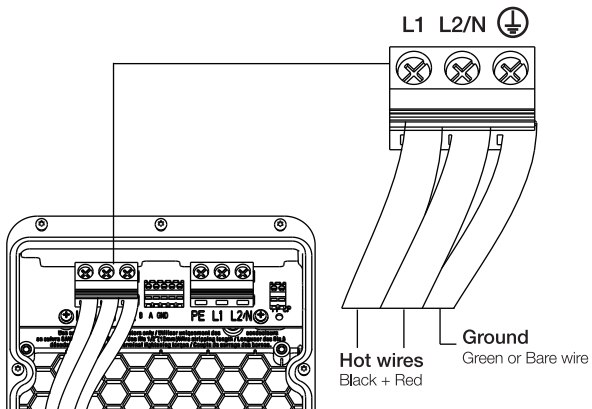

1. Strip the wires to 1/2" (12 mm).
2. Connect the wires (L1, L2, and Ground) per the diagram and tighten each connector screw to 2 N·m (17.7 in·lbs).
3. Reinstall the covers and tighten the screws.


Mounting the Charger

1

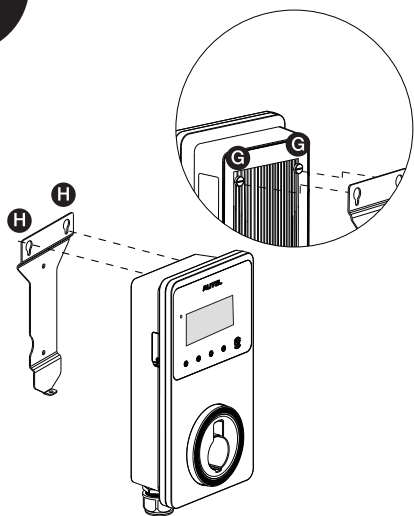

Attach the charger to the wall dock by inserting the mounting screws (G) on the back of the charger into the two upper mounting holes (H). Slide the charger downwards.

2

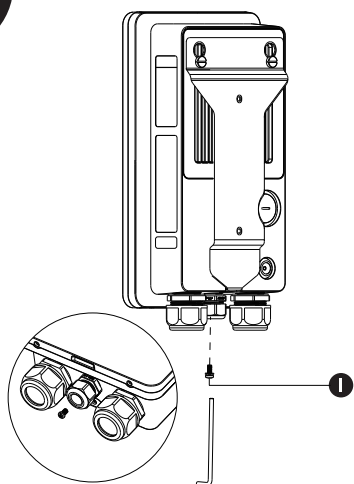


Screw the M5 x 12 screw (I) into the hole at the bottom of the charger and tighten the screw to secure the charger using the screwdriver type T25.

Connecting to the Internet

The charger can be connected to the Internet by Ethernet cable, Wi-Fi or a SIM card.


To connect via the Ethernet cable:

1

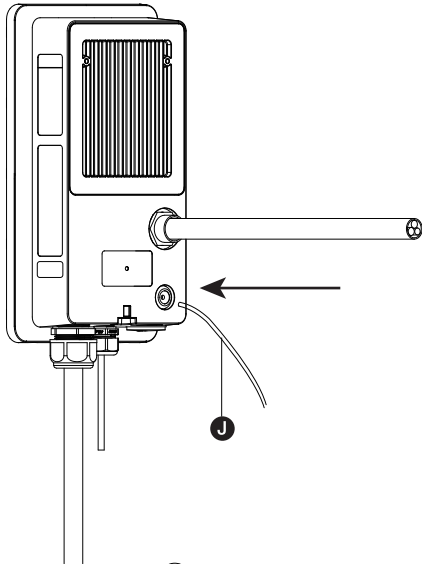

Rear Entry


1. Pierce the rubber grommet and put the Ethernet cable (J) through it.
2. Connect the RJ45 plug with the Ethernet cable.

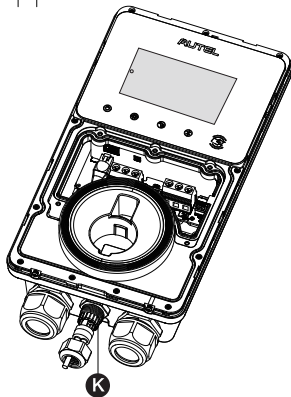

Bottom Entry


Put the Ethernet cable with the RJ45 plug through the bottom Ethernet cable input port (K).

2

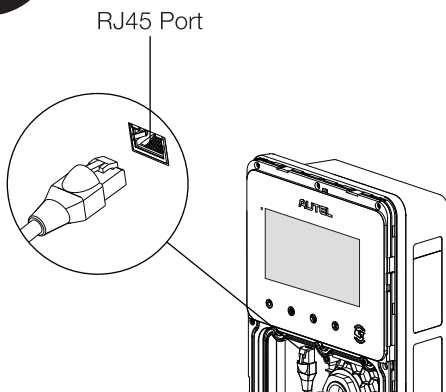

Plug the cable into the RJ45 port as shown.

To connect via the SIM card:

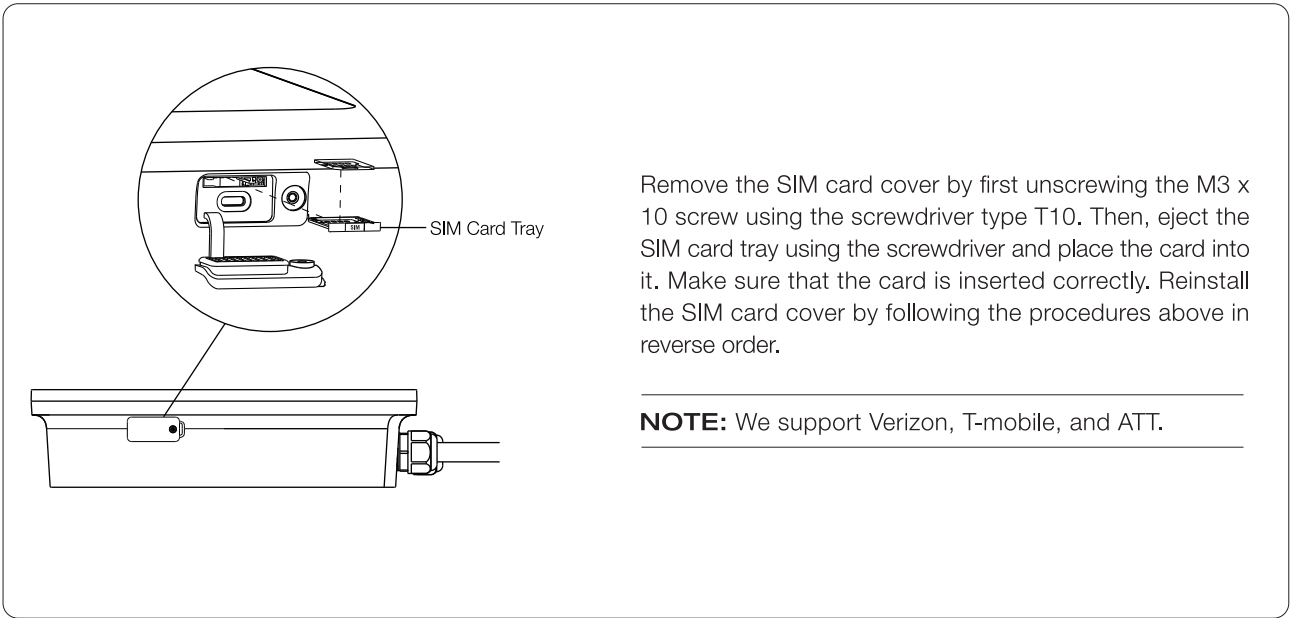


Remove the SIM card cover by first unscrewing the M3 x 10 screw using the screwdriver type T10. Then, eject the SIM card tray using the screwdriver and place the card into it. Make sure that the card is inserted correctly. Reinstall the SIM card cover by following the procedures above in reverse order.

NOTE: We support Verizon, T-mobile, and ATT.

Adjusting the Rated Current

The MaxiCharger AC Wallbox Commercial allows you to manually set a lower maximum current using a current selector when installing your charger on a circuit rated lower than the maximum rating for your charger.

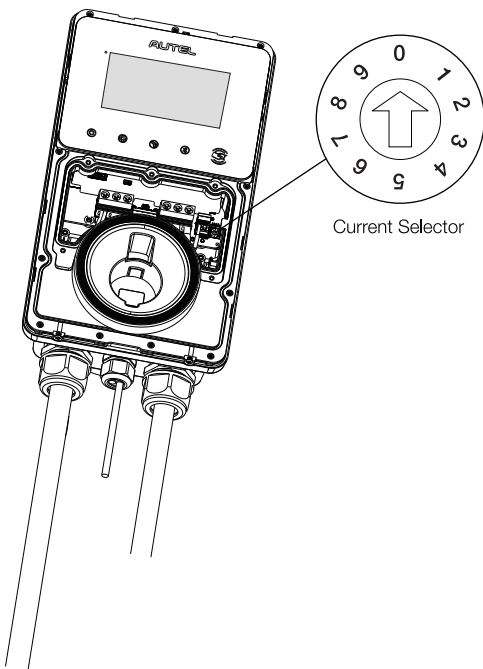

1. Remove the covers and locate the current selector.
2. Use a flathead screwdriver to set the rotary switch to the appropriate position per the diagram below.

Position	Amperage	Circuit Breaker Rating
0	Not in Use	N/A
1	16	20
2	24	30
3	32	40
4	40	50
5	48	60
6	50	70
7	Not in Use	N/A
8	Not in Use	N/A
9	Not in Use	N/A

NOTE: When the rotary switch is at 0, 7, 8 or 9, the corresponding amperage will still be 16, 50, 50, and 50, respectively.

3. When the current of your charger is set lower than the maximum rating, choose the correct current value from the Amperage Labels and affix it over the existing label on the charger.



CAUTION: To reduce the risk of fire, only connect your charger to a circuit with a branch circuit over-current protection of 125% of the selected maximum amperage setting of the device in accordance with ANSI/NFPA 70 (US) C22.2 NO 280 13 (Canada).

Using the Autel Charge App


1. Find your 8-digit PIN code on the right.
2. Scan the QR code below to download the Autel Charge app from the Google Play or App Store.
3. Open the Autel Charge app and select a desired function to start.




Please scan the QR code below to access the manuals.



REV	POSITION	DATE	DESCRIPTION

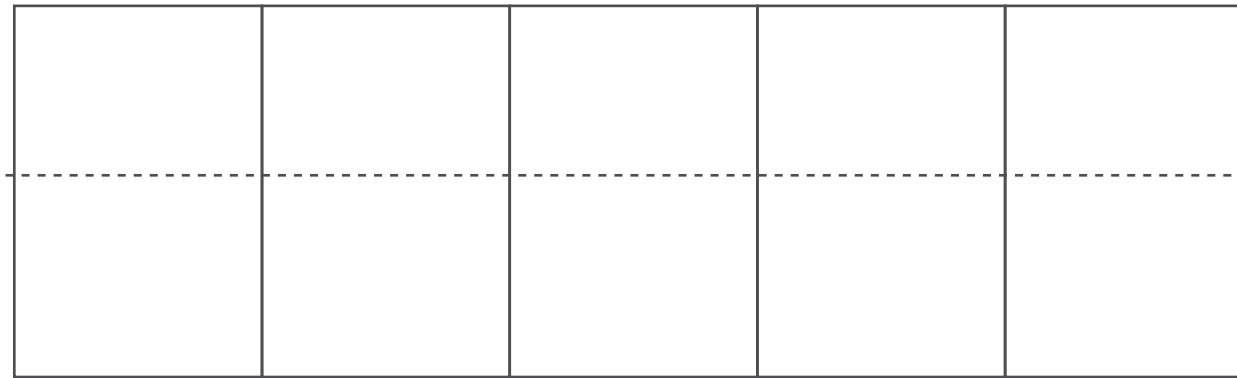

风琴折再对折


颜色	备注
 PANTONE BLACK	风琴折再对折

注：AUTEL设计部不指定供应商。效果做到参考样品一致即可。

DIM	Sheetmetal	Machining
0~6	0.10	0.05
6~30	0.15	0.10
30~120	0.25	0.15
120~300	0.35	0.20
300~600	0.50	0.25
600~1200	0.60	0.30
>1200	0.80	0.50
ANG.	1~	30°

AUTEL 道通科技股份有限公司
Autel Intelligent Technolog Corp.Ltd.

These Drawings And Specification Are The Property Of AUTEL And Shall NOT Be Reproduced Copied Or Used In Any Manner Without The Prior Written Consent Of AUTEL.

PROJ 

TITLE: 快速指引			
DRAW: 何群	UNITS: 190x265mm	DWG NO: AUT62060832	
CHKD: 杨柳	FINISH:	PART NO: 500006891	
STAD:	MASS(Kg):	SCALE:	
APPD: 简振哲	SCALE:	Material: 100g书写纸	
SHEET: 1 OF 1	PRODUCT: 美标交流插枪版(商用)	Material: 100g书写纸	

&PROJ_RELEASE
 MODELNAME
 FILENAME: